

Operating Instructions
for
Membrane Level Monitor
for Bulk Goods

Model: NMF



1. Contents

| | |
|--|----|
| 1. Contents..... | 2 |
| 2. Note | 3 |
| 3. Instrument Inspection..... | 3 |
| 4. Regulation Use..... | 3 |
| 5. Operating Principle..... | 4 |
| 6. Mechanical Connection..... | 5 |
| 6.1 Installation with very coarse-grained and sharp-edged bulk goods | 5 |
| 7. Electrical Connection | 6 |
| 7.1 Connection diagram..... | 6 |
| 8. Technical Information / Configuration..... | 7 |
| 8.1 Model NMF-E... configuration standard | 7 |
| 8.2 Model NMF-F...configuration for greater wall thicknesses | 7 |
| 8.3 Model NMF-D...configuration with double-membrane..... | 8 |
| 8.4 Model NMF-B...configuration for higher temperatures | 8 |
| 9. Order Codes | 9 |
| 9.1 NMF-E | 9 |
| 9.2 NMF-F..... | 9 |
| 9.3 NMF-D | 9 |
| 9.4 NMF-B | 9 |
| 10. Dimensions | 10 |
| 10.1 NMF-E..... | 10 |
| 10.2 NMF-F..... | 10 |
| 10.3 NMF-D..... | 11 |
| 10.4 NMF-B..... | 11 |
| 11. Declaration of Conformance | 12 |

Manufactured and sold by:

Kobold Messring GmbH
Nordring 22-24
D-65719 Hofheim
Tel.: +49(0)6192-2990
Fax: +49(0)6192-23398
E-Mail: info.de@kobold.com
Internet: www.kobold.com

2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EWG-machine guidelines.

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition.

Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

- Membrane Level Monitor model: NMF
- Operating Instructions

4. Regulation Use

Any use of the Membrane Level Monitor, model: NMF, which exceeds the manufacturer's specifications may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Operating Principle

Membrane level monitors allow economic level monitoring of bulk goods in storage vessels. They may be used to indicate full and empty states and load demand for dusty, powdery, granulated and grainy bulk goods. They are suitable for use with bulk materials (0.3 to 2.5 t/m³) and particle sizes up to 30 mm. The devices will operate faultlessly provided the bulk goods flow easily at not too small an angle. Only such materials exert sufficient operating pressure on the detector fitted in the wall of the silo.


The housing made of cast aluminium or glass-fibre reinforced plastic carries the membrane retained by a screwed-on ring. With its own weight the bulk material presses against the membrane which is prestressed with a spring through to the support. A plunger fixed to the membrane transfers the pressure directly to a microswitch with changeover contact. If the bulk material subsides, the membrane is relieved and the contact is switched back. The sensitivity can be adjusted with a spring. The monitor can thus be optimised for the type of fill and the installation conditions.

6. Mechanical Connection

6.1 Installation with very coarse-grained and sharp-edged bulk goods

The installation of guards is recommended for very large grained and sharp-edged materials with high specific weight.

A proposal for such a guard is shown in the sketch. The guard mounted over the level monitor protects sensor and membrane against damage from dropping bulk material. The curtain (made of rubber or plastic, for instance) protects the membrane from excessive wear by hanging against the membrane as the amount of bulk material increases. Make sure that the monitor is not in the path of the inflowing material, as otherwise monitor and membrane would be destroyed very quickly.

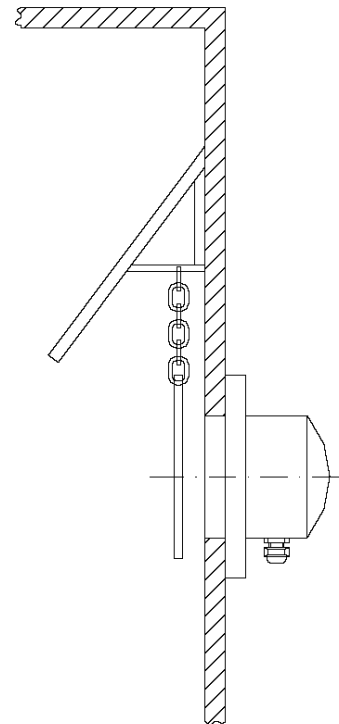

7. Electrical Connection

7.1 Connection diagram




Attention! Make sure that the voltage values of your system correspond with the voltage values of the measuring unit.

- Make sure that the supply wires are de-energised.
- Plug in the system according to the connecting diagrams.



Attention! Incorrect wiring will lead to damage of the unit's electronics.

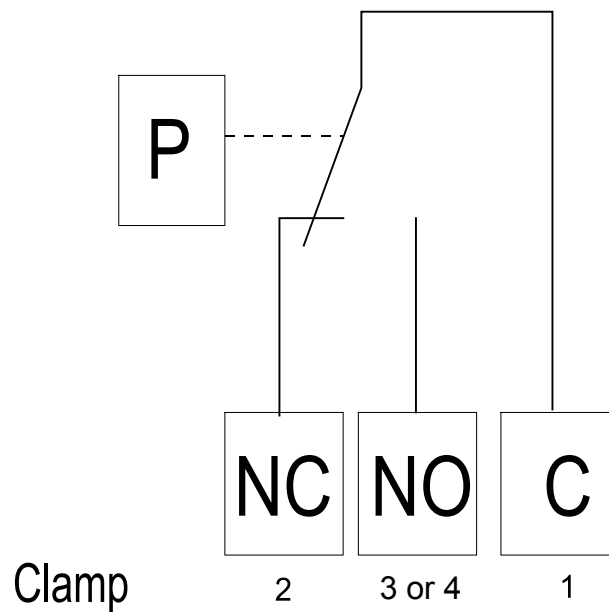

8. Technical Information / Configuration

8.1 Model NMF-E... configuration standard

| | |
|------------------------|--|
| Materials: | Membrane made of neoprene® or FPM retaining ring in galvanised steel or stainless steel 1.4301 housing in glass-fibre-reinforced plastic GRP |
| Weight: | 480 g |
| Sensitivity: | adjustable between 60 g and 200 g |
| Protection: | IP 40 screwed fitting bottom IP 53 screwed fitting top |
| Contact loading: | max. 15 A at 250 V _{AC} |
| Temperature range: | -20 ... +80 °C |
| Max. pressure: | 5 bar |
| Cable entry fitting: | Pg 11 |
| Switch-in delay: | 0 s |
| Installation position: | any |

8.2 Model NMF-F...configuration for greater wall thicknesses

| | |
|------------------------|---|
| Materials: | Membrane made of neoprene® or FPM retaining ring made of galvanised steel or stainless steel 1.4301 housing in glass-fibre-reinforced plastic GRP |
| Weight: | 530 g |
| Sensitivity: | adjustable between 60 g and 200 g |
| Protection: | IP 40 screwed fitting bottom IP 53 screwed fitting top |
| Contact loading: | max. 15 A at 250 V _{AC} |
| Temperature range: | -20 ... +80 °C |
| Max. pressure: | 5 bar |
| Cable entry fitting: | Pg 11 |
| Switch-in delay: | 0 s |
| Installation position: | any |

9. Order Codes

9.1 NMF-E

Order Details (Example: NMF-ENN)

| Membrane | Retaining ring | Order no. |
|-----------------|-----------------------|------------------|
| Neoprene® | Galvanised steel | NMF-ENN |
| | St. steel 1.4301 | NMF-ENE |
| FPM | Galvanised steel | NMF-EVN |
| | St. steel 1.4301 | NMF-EVE |

9.2 NMF-F

Order Details (Example: NMF-FNN)

| Membrane | Retaining ring | Order no. |
|-----------------|-----------------------|------------------|
| Neoprene® | Galvanised steel | NMF-FNN |
| | St. steel 1.4301 | NMF-FNE |
| FPM | Galvanised steel | NMF-FVN |
| | St. steel 1.4301 | NMF-FVE |

9.3 NMF-D

Order Details (Example: NMF-DNN)

| Membrane | Retaining ring | Order no. |
|-----------------|-----------------------|------------------|
| Neoprene® | Galvanised steel | NMF-DNN |
| | St. steel 1.4301 | NMF-DNE |
| FPM | Galvanised steel | NMF-DVN |
| | St. steel 1.4301 | NMF-DVE |


9.4 NMF-B

Order Details (Example: NMF-BNN)


| Membrane | Retaining ring | Order no. |
|-----------------|-----------------------|------------------|
| Neoprene® | Cast aluminium | NMF-BNA |
| FPM | Cast aluminium | NMF-BVA |
| St. steel | Cast aluminium | NMF-BEA |

10. Dimensions


10.1 NMF-E...

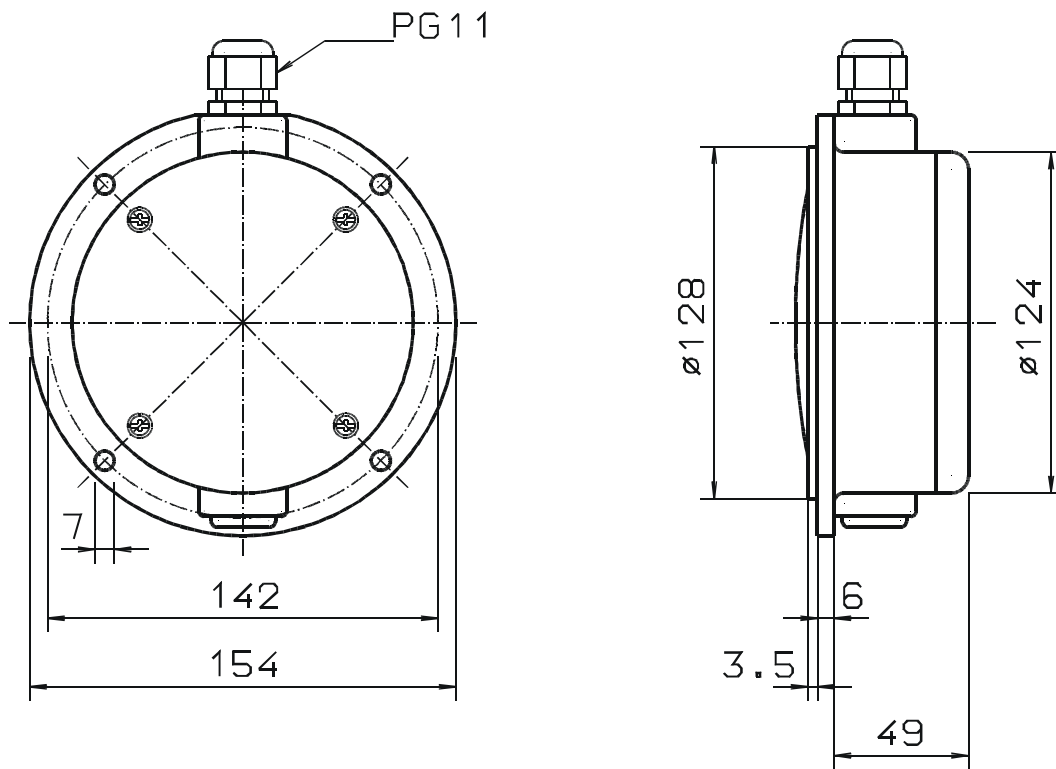


10.2 NMF-F...

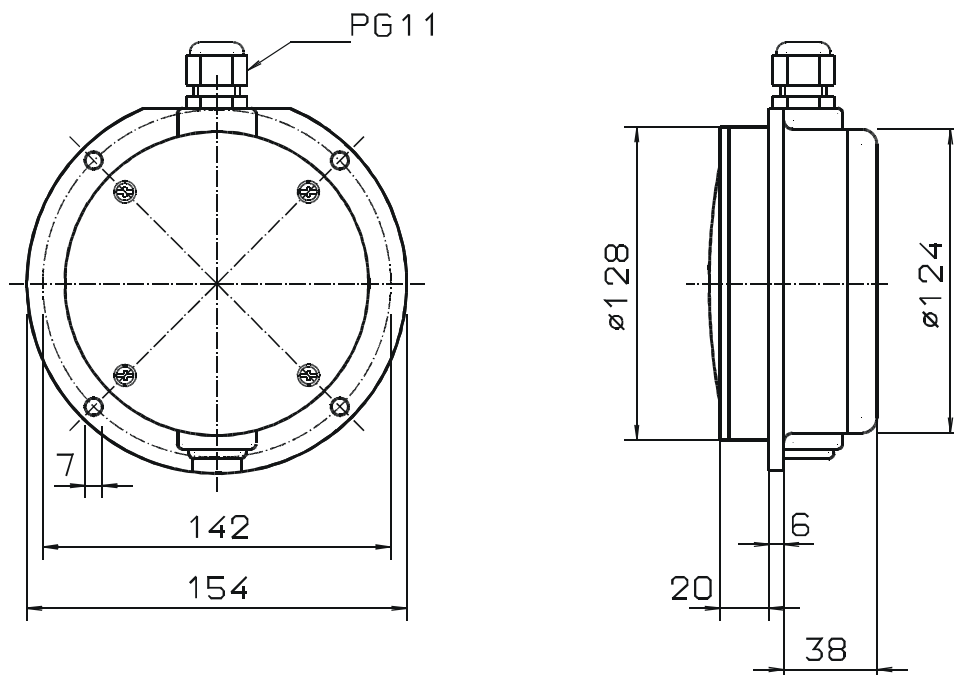

10.3 NMF-D...

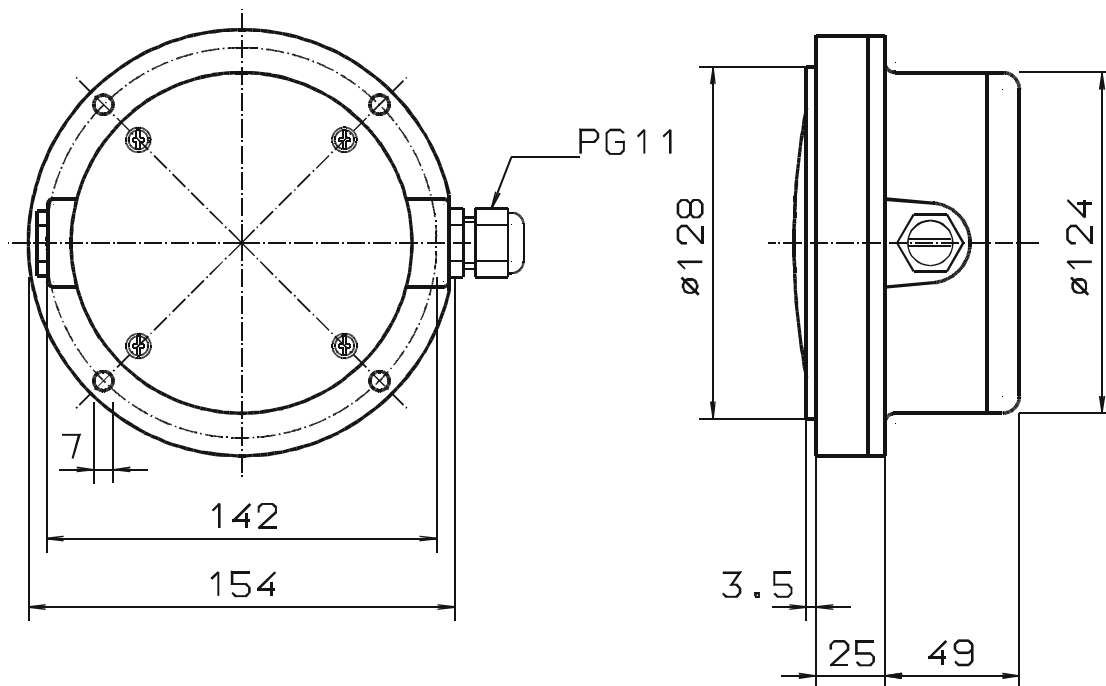

10.4 NMF-B...

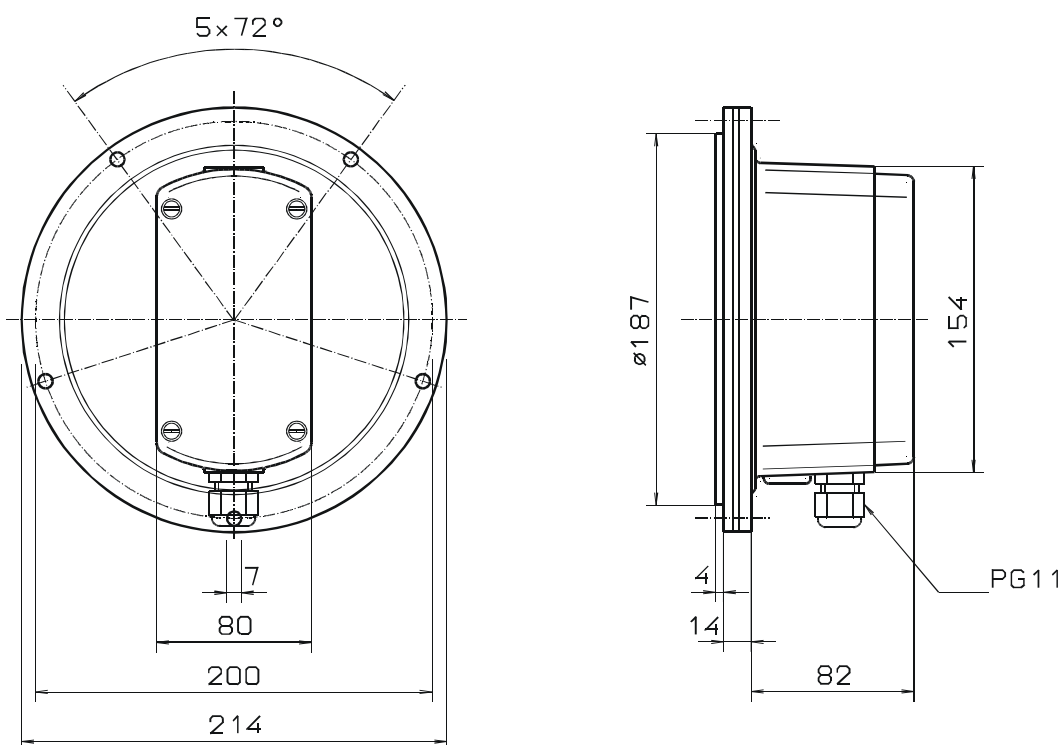

11. Declaration of Conformance

We, KOBOLD Messring GmbH, Hofheim-Ts, Germany, declare under our sole responsibility that the product:

Membrane Level Monitor

Model: NMF-...

to which this declaration relates is in conformity with the standards noted below:

EN 1050

EN ISO 12100-1

EN ISO 12100-2

EN 60204

EN 61010-1

EN 55022

EN 55024

EN 61000-6-2

Also the following EWG guidelines are fulfilled:

89/336/EWG

98/37/EG

Hofheim, 08. March 2006



H. Peters
General Manager



M. Wenzel
Proxy Holder